COBIZI

CONTACT US:

If you have any questions about the installation of COBIZI products, just e-mail us at service.canopy@outlook.com.

Alternative method to contact us (amazon.com orders only)
1.Log into your Amazon account
2.Go to "Your Orders" and find the purchase
3.Click on "Contact Seller"

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

ASSEMBLY INSTRUCTIONS



20X40 FT PARTY TENT

Product comes packaged in 5 boxes that might not arrive together; Safety measures and professional installation are highly recommended.
Before returning to the store,please contact our Customer Service

service.canopy@outlook.com

We appreciate the trust and confidence you have placed in COBIZI through the purchase of our product. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.
Thank you for choosing COBIZI

Made in China

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.


1. Assembly requires a minimum of three individuals.
2. It is advisable to have a ladder for the assembly process.
3. Before commencing assembly, make sure to gather all the necessary parts and arrange them systematically.
4. Under no circumstances should candles, matches, or any open flames be used inside or in close proximity to the tent.
5.If any part of the pipe is deformed during transportation, you can use pliers to restore the shape of the pipe.

Item no.	Reference Image	Qty.
1		X40
2		X14
3		X14
4		X2
5		X2
6		X2
7		X4
A		X6
B		X15
F		X10
G		X4

1

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

12

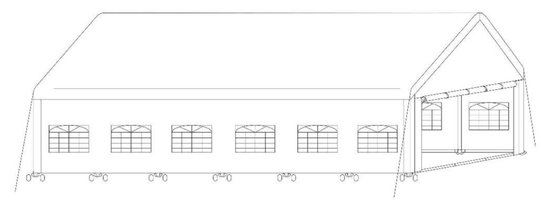


Complete Installation


14

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.


11

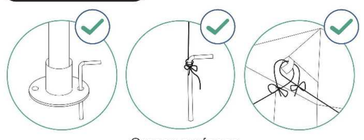

Grassy surfaces

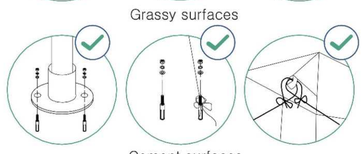





Cement surfaces

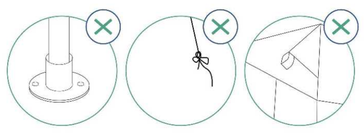

To improve wind resistance,
be sure to complete this installation step. If expansion screws or ground nails are not installed,strong winds may topple the gazebo.
Expansion screws are essential for stability on cement surfaces, and ground nails are for grassy surfaces.
Ground nails are included in the package while expansion screws are not provided.


13

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

Reference Image		Qty.
		X128
	Tent peg	X32
		X4
		X1
		X2
	W1	X2
	W2	X2
	W3	X2

2

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

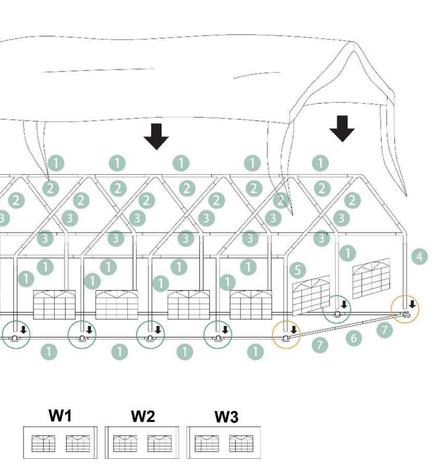


W1 W2 W3

3

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

10

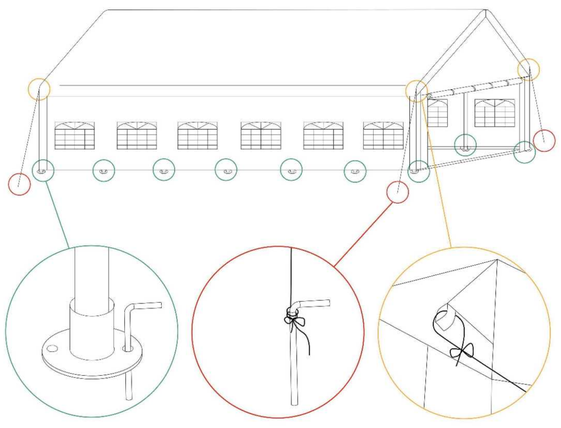

φ5 32 pcs

4pcs

12


MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

9



52pcs 2pcs W1 2pcs W2 2pcs W3 2pcs

The fasteners marked in red are the same ones used in step 4.
4 bungee cord fasteners are needed for part 4 (marked in blue).
12 bungee cord fasteners are needed for part 1 (marked in yellow).
8 bungee cord fasteners are needed for part 6&7 (marked in green).
Hang Side Wall A,B,C from left to right.

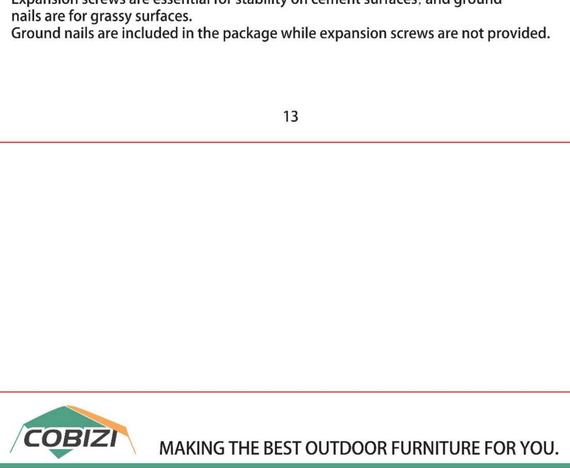

W1 W2 W3

Velcro

11

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

1/X3 ①18pcs Ⓐ6pcs Ⓑ15pcs

2/X14 ②14pcs ③14pcs



4


MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

3

5

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.


8

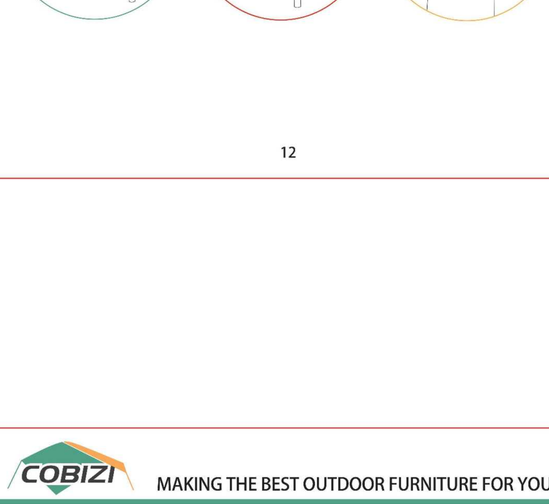

10

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

7 ①12pcs ⑥2pcs ⑦4pcs Ⓕ10pcs Ⓖ4pcs

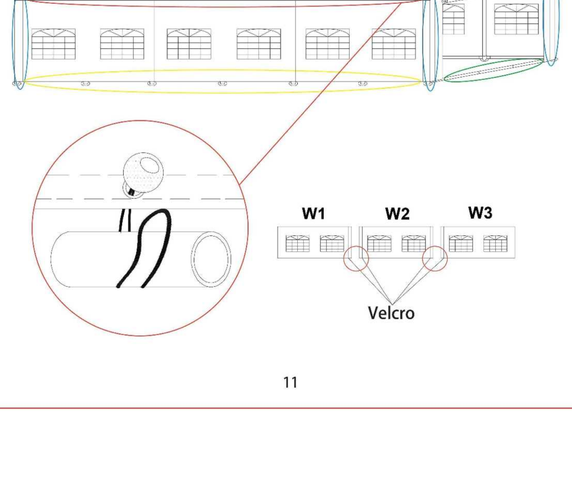



9

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

4 1pc 76 pcs

Every part in the picture marked in blue must be installed with 6 bungee cord fasteners, while parts marked in red with 4 bungee cord fasteners.
The poles marked in red can be temporarily secured first.
The same fasteners are used to secure the cover cloth during step 9.

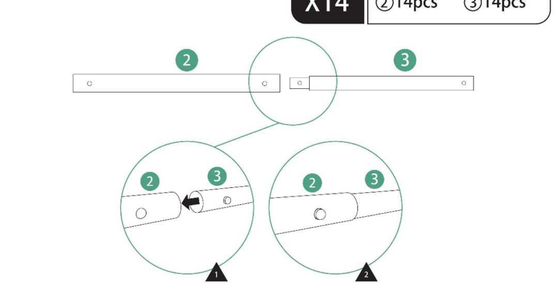


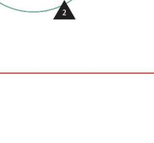

6

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.


5 ①5pcs ④1pc ⑤1pc

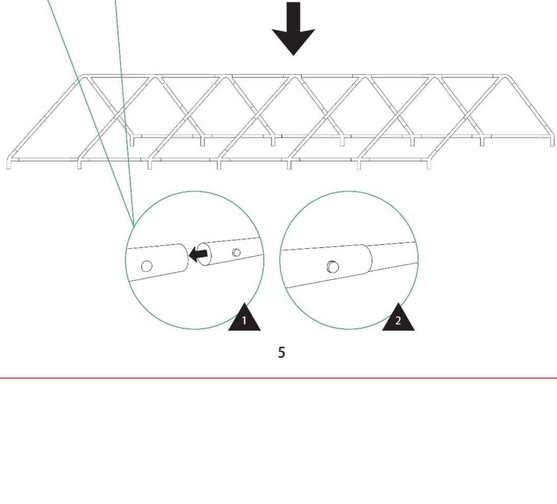

7

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

6 ①5pcs ④1pc ⑤1pc

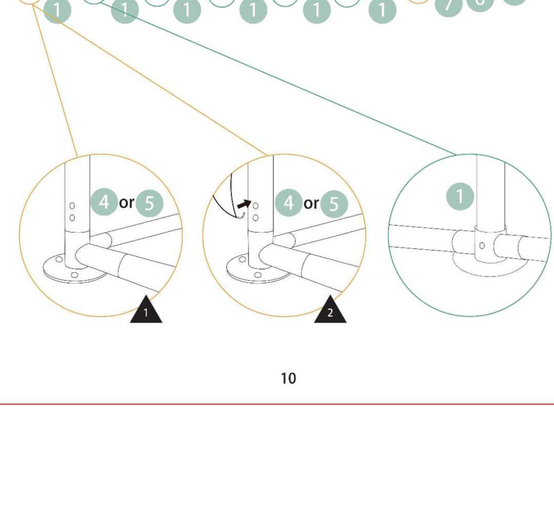

8