
COBIZI

CONTACT US:
If you have any questions about the installation of COBIZI products, just e-mail us at service.canopy@outlook.com.

Alternative method to contact us (amazon.com orders only)
1.Log into your Amazon account
2.Go to "Your Orders" and find the purchase
3.Click on "Contact Seller"

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

ASSEMBLY INSTRUCTIONS

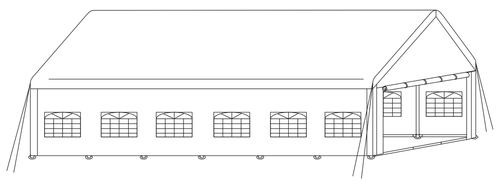

20X40 FT PARTY TENT

Product comes packaged in 5 boxes that might not arrive together; Safety measures and professional installation are highly recommended.
Before returning to the store,please contact our Customer Service

service.canopy@outlook.com

We appreciate the trust and confidence you have placed in COBIZI through the purchase of our product. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.
Thank you for choosing COBIZI

Made in China

第1张正反印

正面

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.


1. Assembly requires a minimum of three individuals.
2. It is advisable to have a ladder for the assembly process.
3. Before commencing assembly, make sure to gather all the necessary parts and arrange them systematically.
4. Under no circumstances should candles, matches, or any open flames be used inside or in close proximity to the tent.
5.If any part of the pipe is deformed during transportation, you can use pliers to restore the shape of the pipe.

Item no.	Reference Image	Qty.
1		X30
2		X14
3		X14
4		X10
5		X4
6		X2
7		X4
A		X6
B		X15
F		X10
G		X4

1

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

12

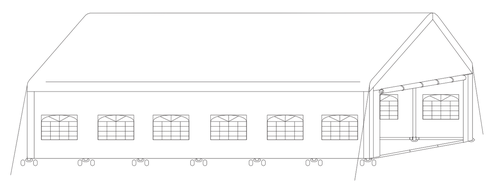


Complete Installation

14

反面

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

11

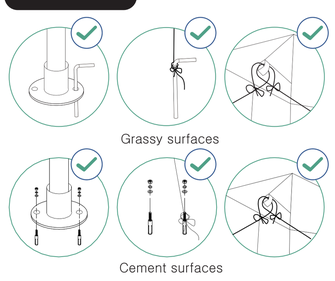

To improve wind resistance,
be sure to complete this installation step. If expansion screws or ground nails are not installed,strong winds may topple the gazebo.
Expansion screws are essential for stability on cement surfaces, and ground nails are for grassy surfaces.
Ground nails are included in the package while expansion screws are not provided.

13

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.


Reference Image	Qty.
	X152
φ5 Tent peg	X18
	X4
	X1
	X2
A	X2
B	X2
C	X2

2

第2张正反印

正面

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

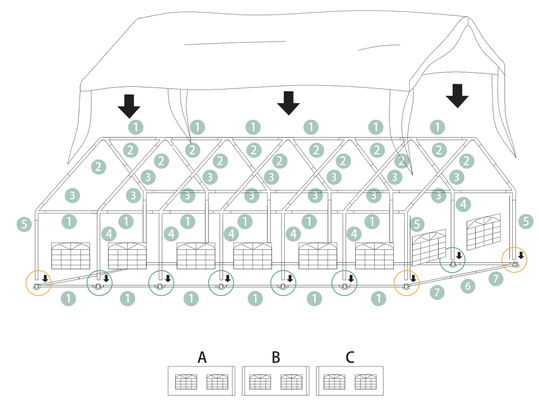


3

反面

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

10 φ5 18pcs 4pcs

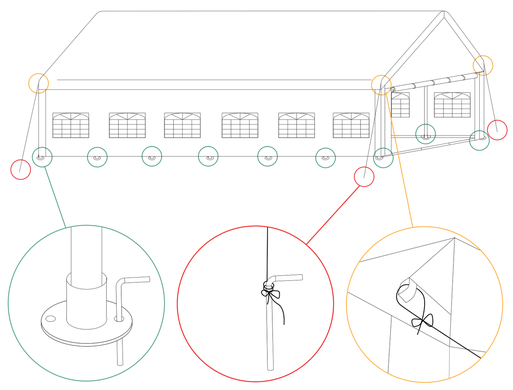


12

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

9 A B C 56pcs 2pcs 2pcs 2pcs 2pcs


The fasteners marked in red are the same ones used in step 4.
4 bungee cord fasteners are needed for part 4 (marked in blue).
12 bungee cord fasteners are needed for part 1 (marked in yellow).
8 bungee cord fasteners are needed for part 6&7 (marked in green).
Hang Side Wall A,B,C from left to right.

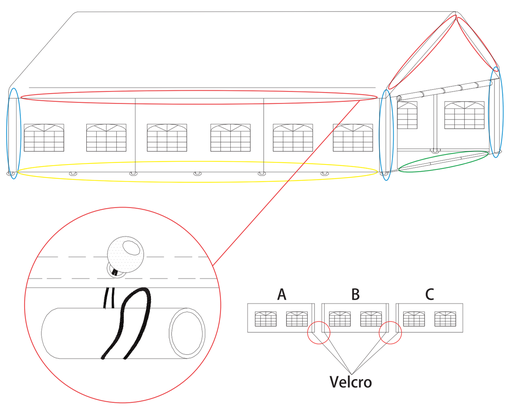


11

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

1 X3 ①18pcs Ⓐ6pcs Ⓑ15pcs

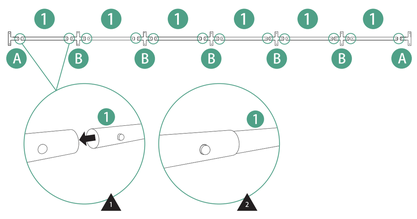

2 X14 ②14pcs ③14pcs

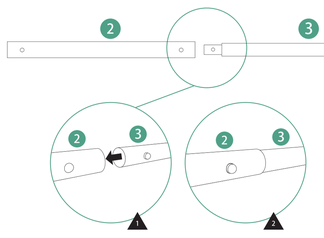


4

第3张正反印

正面

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

3

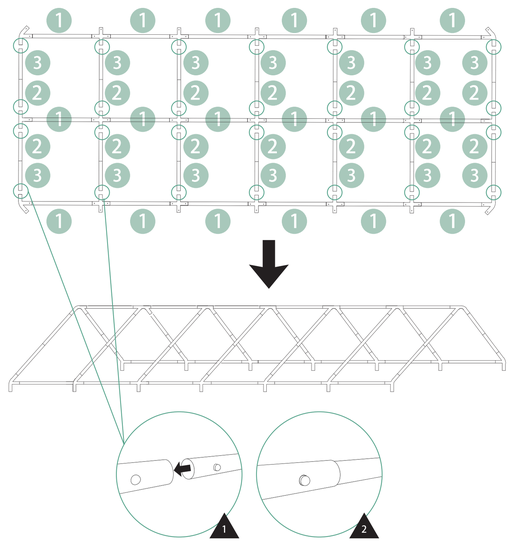


5

反面

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.


8

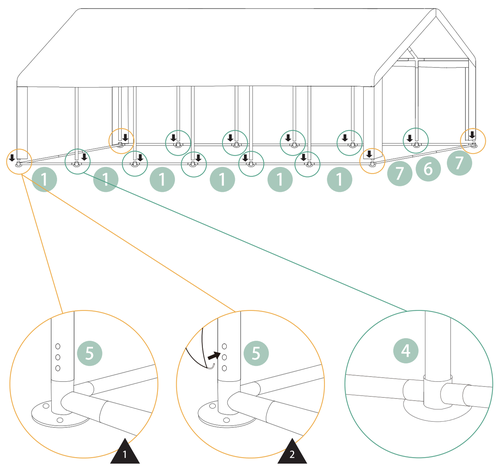

10

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

7 ①12pcs ⑥2pcs ⑦4pcs Ⓕ10pcs Ⓖ4pcs

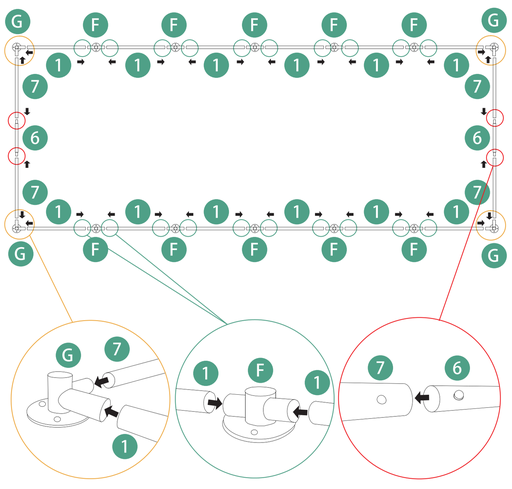


9

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

4 1pc 96pcs

Every part in the picture marked in blue must be installed with 6 bungee cord fasteners. while parts marked in red with 4 bungee cord fasteners.
The poles marked in red can be temporarily secured first.
The same fasteners are used to secure the cover cloth during step 9.

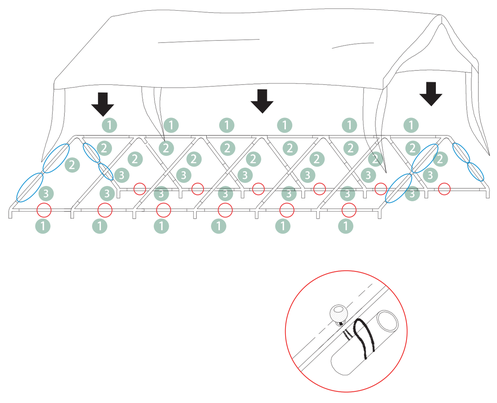


6

第4张正反印

正面

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

5 ④5pcs ⑤2pcs

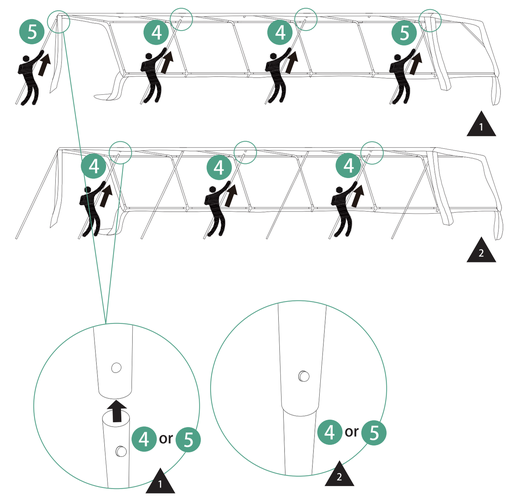


7

反面

MAKING THE BEST OUTDOOR FURNITURE FOR YOU.

6 ④5pcs ⑤2pcs

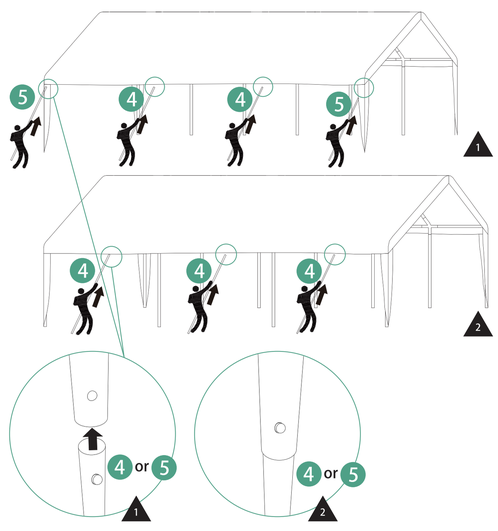

8