
# Assembly&instruction Manual

**SPU: SPC000268**

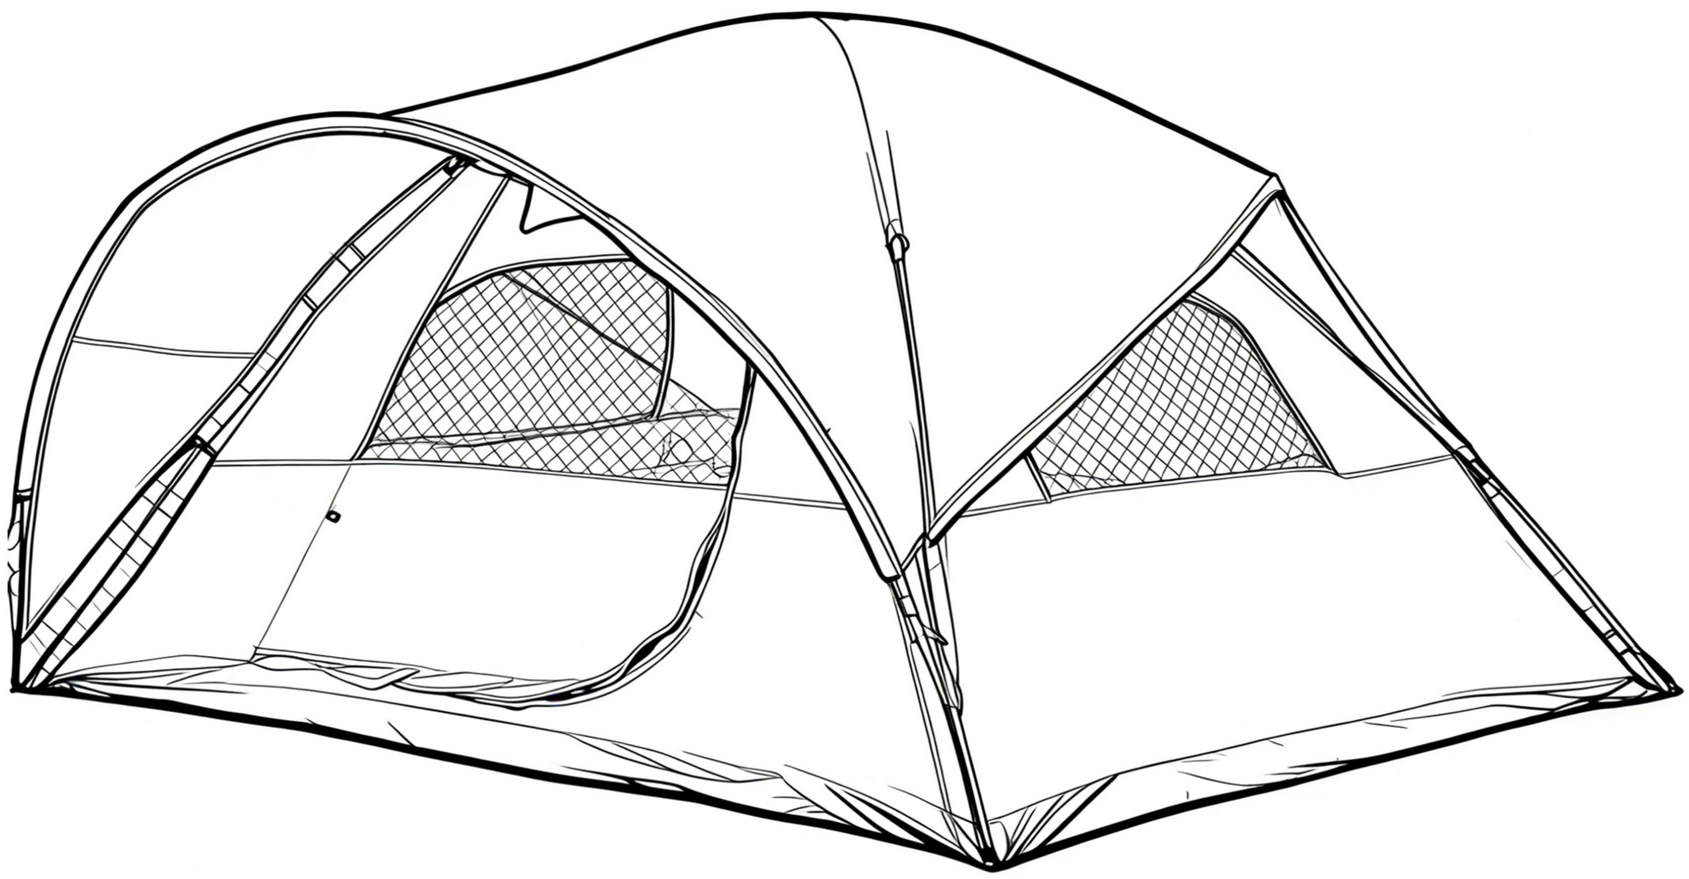






141.73inch X 228.6inch X 71.65inch camping tent

Thank you very much for choosing **cobizi's** camping tents, after opening the box, please check the following accessories to see if they have their full, any problems with the product, please contact our service email!

Team mailbox:service@cobiziofficial.com


Have a nice trip !

# Part & Accessories

| NO | A | B | C | D | E | F | G |
|---|---|---|---|---|---|---|---|
| LIST | Long Frame Tube A  | Short Frame Tube B  | Long Frame Tube C  | Rope  | Steel Peg  | Tent  | Bag  |
| QTY | 2 PCS | 1 PCS | 1 PCS | 7 PCS | 17 PCS | 1 PCS | 1 PCS |


## SET UP

Step 1

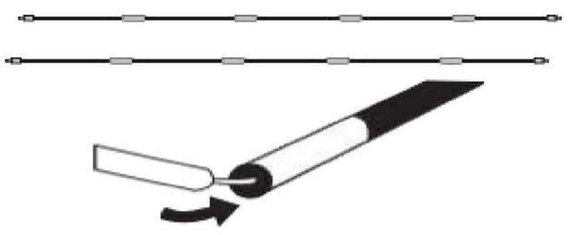


Assemble the tent poles.

Step 2
A

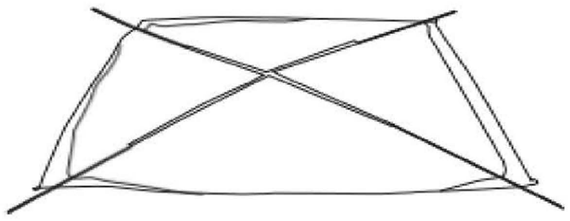


Put the tent poles(A) into the body of the tent through the sleeves,forming an "x" shape over the tent.

Step 3

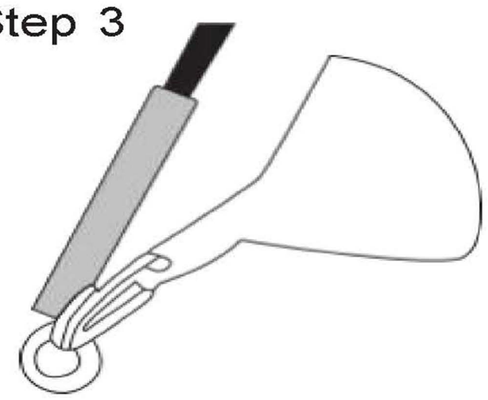


Connect poles to the tent with the pins.

Step 4

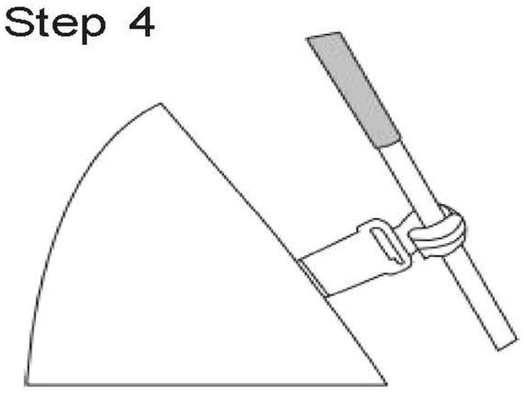


Clip plastic tent clips to the fiberglass poles (Do not clip to metal ferrule).

Step 5

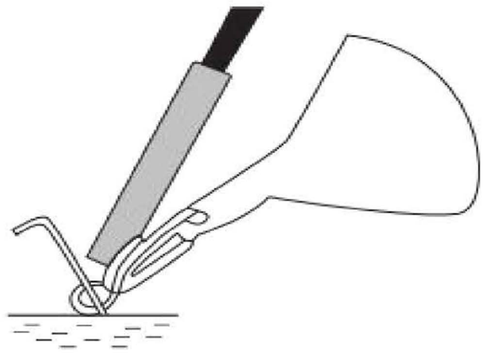


Stake out the tent using included tent pegs. Ensure tent mat is stretched flat at corners.

Step 6

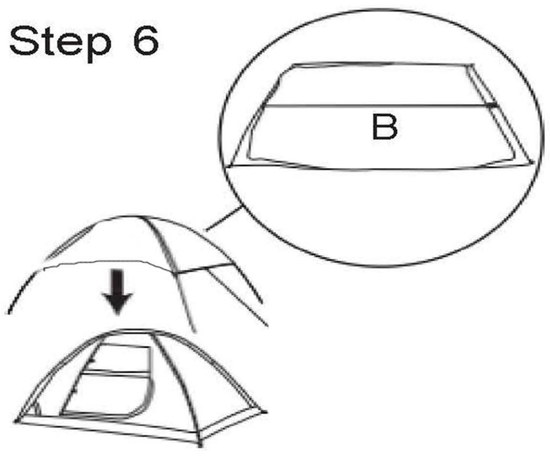


Insert the glass fiber (B) into the rain fly webbing, put the rain fly on top of the tent, and fix the rain fly on the top of the main tent with rope.

Step 7

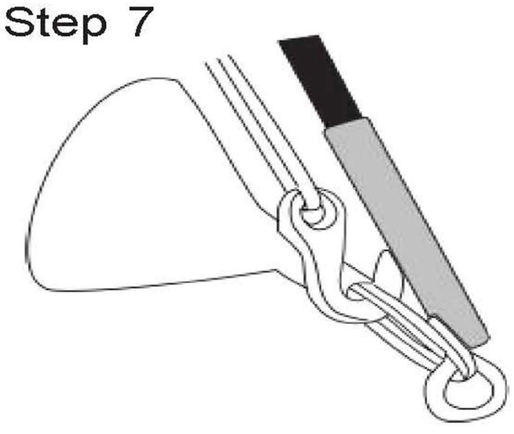

Link the S-HooKs at the end of the rain fly.

Step 8



Insert the long pole C into orange tunnel in front of rain fly. Tie out the rain fly sides using the webbing loops,fix the guy lines with tent pegs.

**Made in China**

Warning: To avoid the potential dangers of suffocation, please keep all parts and packaging away from babies and children.